

Driver's Dashboard Lower Cover Removal and Installation

Removal/Installation


SRS components are located in this area. Review the [SRS component locations](#) and the [precautions and procedures](#) before doing repairs or service.

1. Dashboard Side Cover - Remove (Driver's Side)

2. Driver's Dashboard Lower Cover - Remove


Fastener Locations

D ▷ : 12 E ▷ : 2 F ▶ : 2

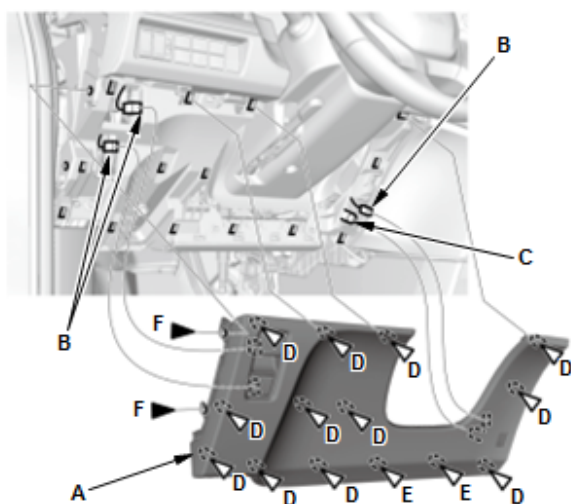

1. Remove the driver's dashboard lower cover (A).
2. Disconnect the connectors (B).
3. Disconnect the aspirator hose (C).

3. Driver's Dashboard Switch Panel - Remove

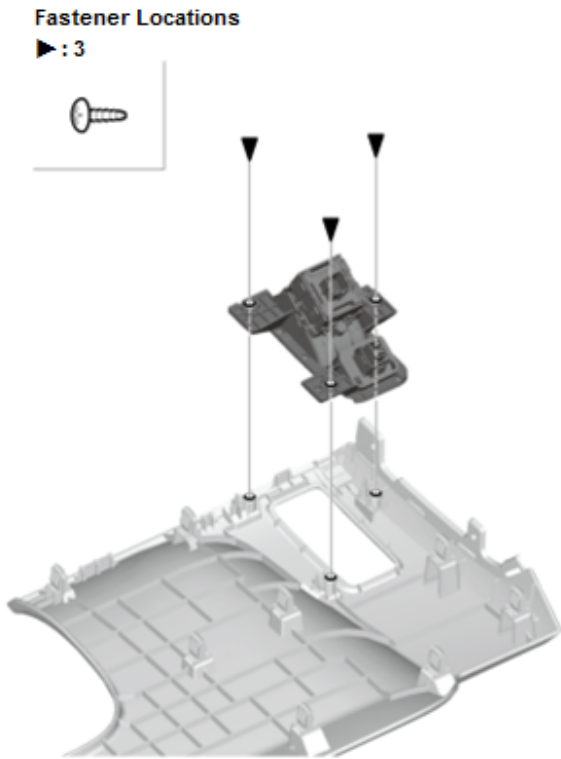

4. All Removed Parts - Install

1. Install the parts in the reverse order of removal.