


Driver's Outer Dashboard Trim Removal and Installation

Removal/Installation

1. Driver's Outer Dashboard Trim - Remove

Fastener Locations

▷ : 2

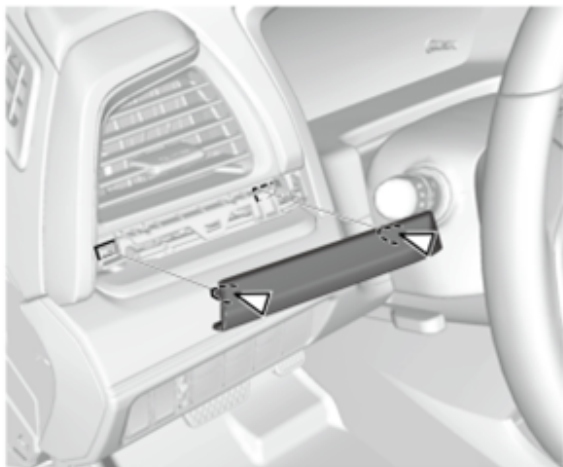

2. All Removed Parts - Install

1. Install the parts in the reverse order of removal.