

Front Door Panel Removal and Installation


Removal/Installation

1. Front Door Panel - Remove

1. Pry out the lid (A), and remove it, then remove the screws.

Fastener Locations


▶ : 2

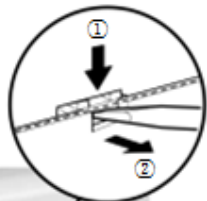

2. Remove the lid (A), then remove the screw.


Fastener Location

▶ : 1

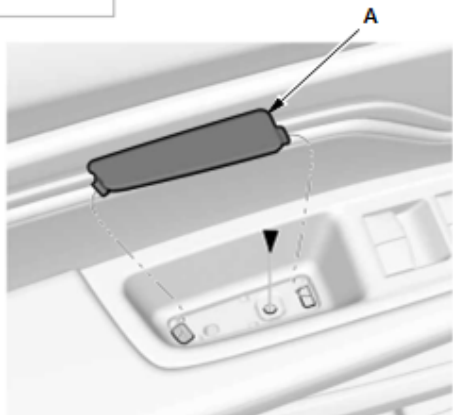

Fastener Locations


▷ : 14

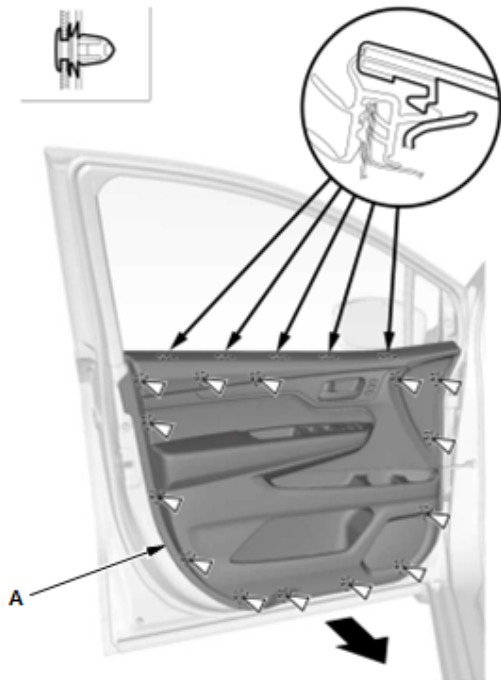

3. Starting at the bottom edge of the front door panel (A),


4. Release the inner handle from the inside of the front door panel.

5. While holding the front door panel (A) away from the door, disconnect the connectors (B).

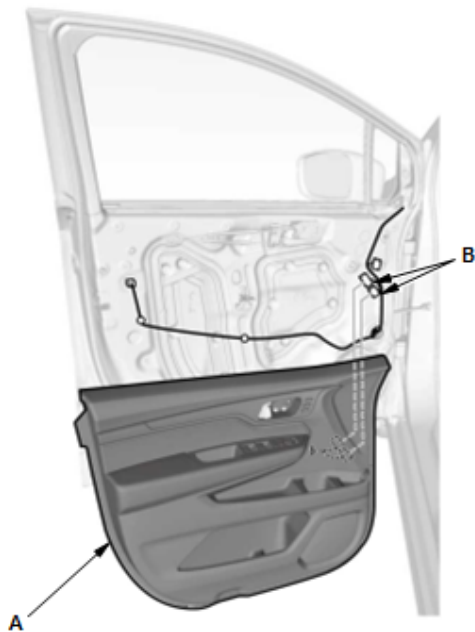**Front Door Armrest/Switch Panel Base****2. Front Door Armrest Switch Panel Base - Remove**

Fastener Locations


▶ : 14

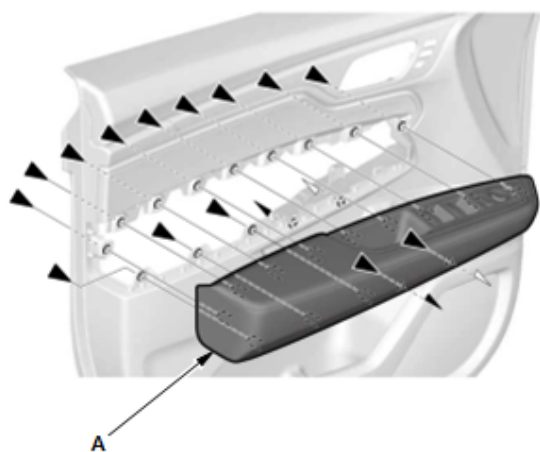

1. Remove the front door armrest (A).

Fastener Locations

▶ : 4

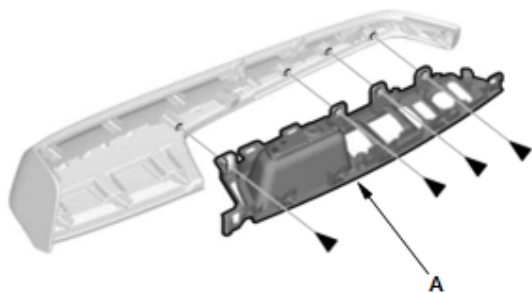

2. Remove the switch panel base (A).

3. All Removed Parts - Install

1. Install the parts in the reverse order of removal.

4. Power Window Control Unit - Reset