
Power Mirror Removal and Installation

Removal/Installation

NOTE: How to read the torque specifications.

1. Front Door Panel - Remove


2. Power Mirror - Remove

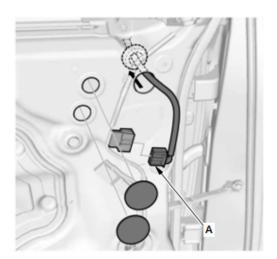


1. Disconnect the connector (A).

1 of 2

2. While holding the power mirror (A), remove the nuts (B).

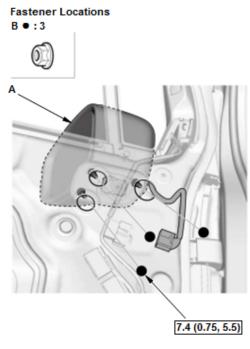

3. Remove the power mirror (A).

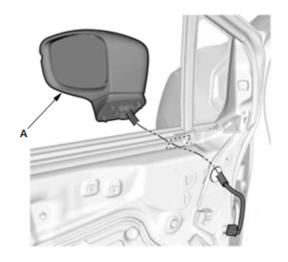

3. All Removed Parts - Install

1. Install the parts in the reverse order of removal.

4. LaneWatch Camera - Aim (With LaneWatch)

2 of 2