


Mirror Holder Removal and Installation


Removal/Installation

NOTE: The following instructions are for the left mirror. The right mirror is symmetrical.

1. Mirror Holder - Remove

1. Carefully push on the top-right corner of the mirror holder (A) to create an opening on the lower-left-hand corner between the mirror holder and the mirror housing (B).
2. Insert a flat-tip screwdriver (C) as shown as twist the screwdriver to create an opening between the mirror holder and the actuator (D).
3. Insert the screwdriver in the opening next to the retaining tabs (E) and twist it to remove the mirror holder.

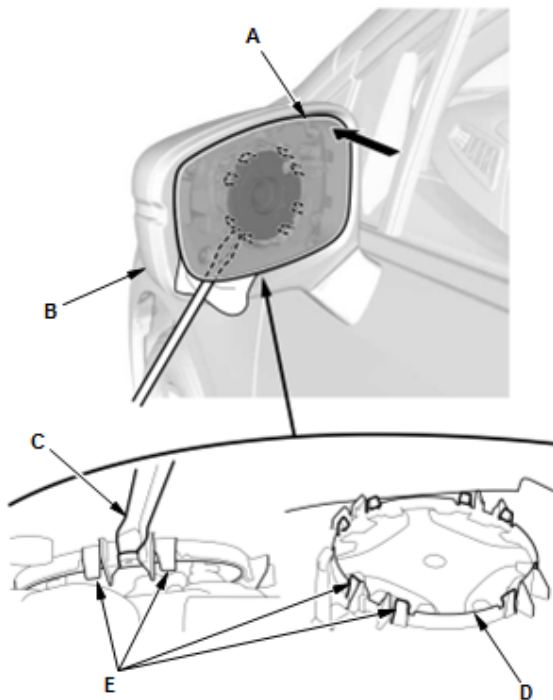

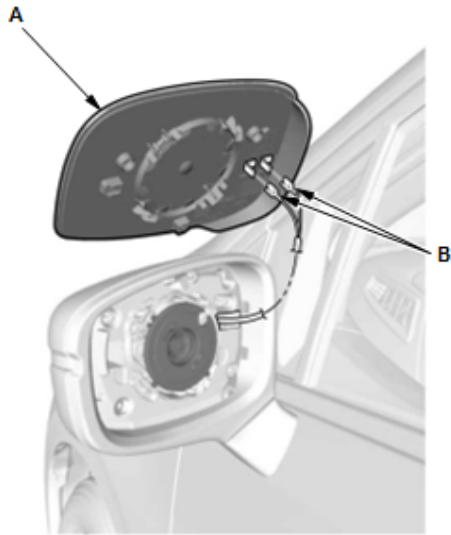

4. With mirror defogger: Disconnect the terminals (B).

2. All Removed Parts - Install

1. Install the parts in the reverse order of removal.